



II. Connections


Receiver

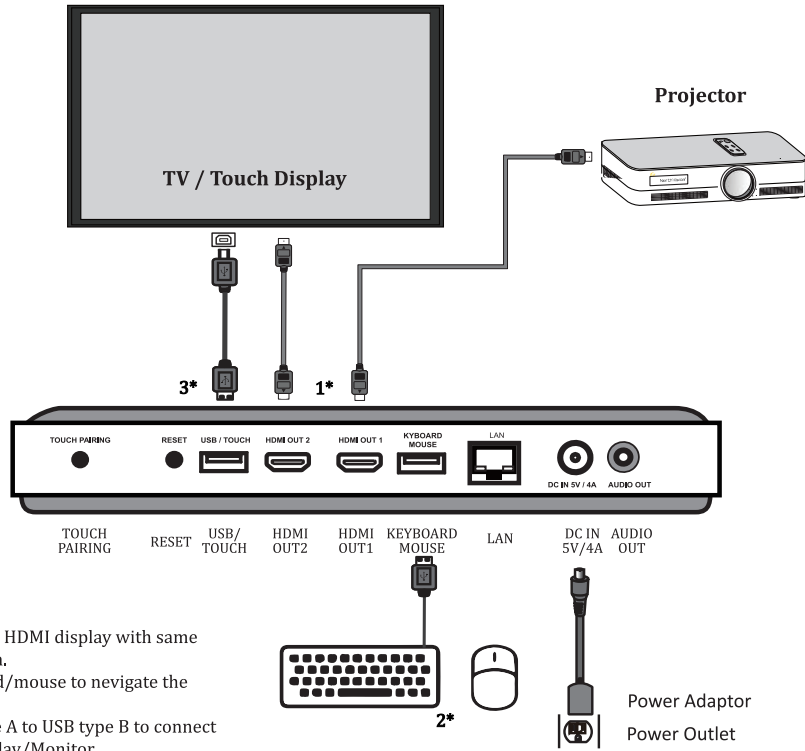

Transmitter

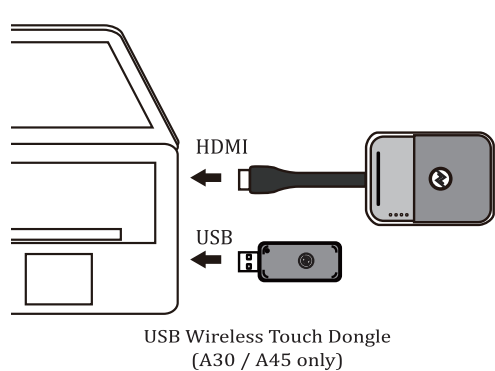


Power Station



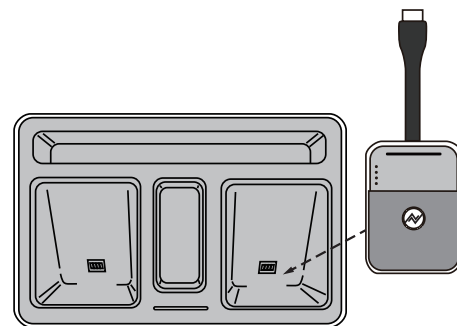


Note:
 Charge the Transmitters for six (6) hours before first-time use.


III. Establish the Collaboration System

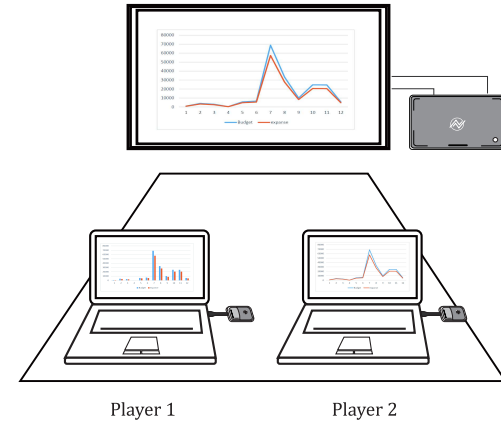

Start Presentation

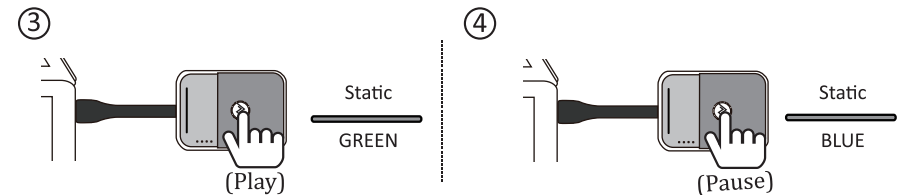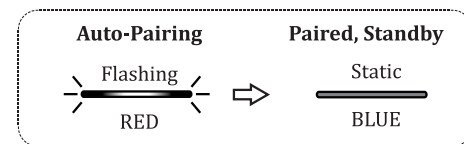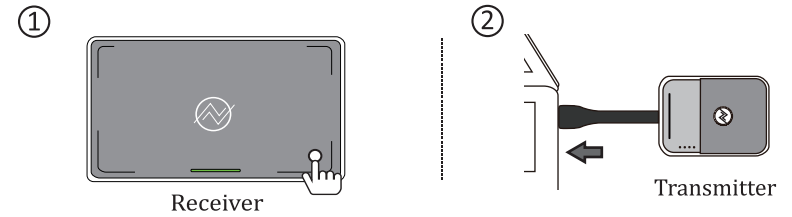


Switching Players

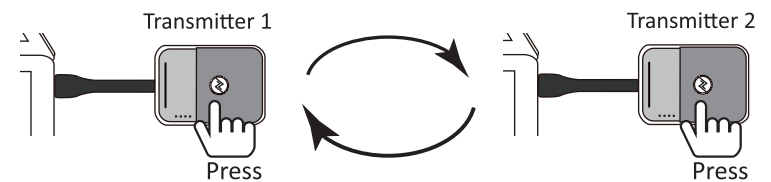


Wireless Touch (A30/A45 only)

Plug & Press

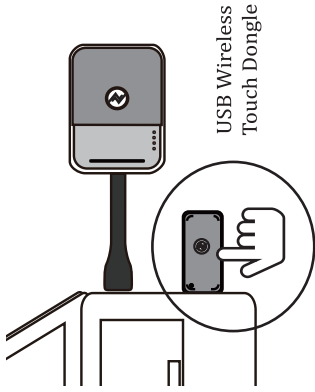

USB Wireless Touch Dongle

Touch Enable

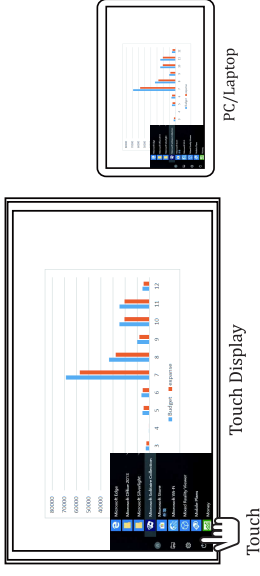


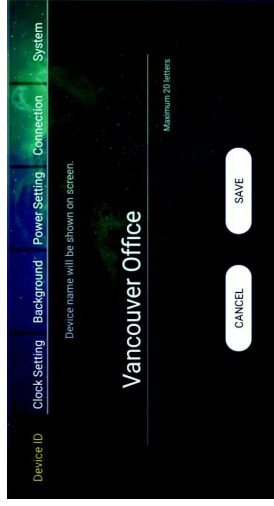
Touch Display

PC/Laptop

*Wireless touch compatibility may follow by different display.
Any question, please contact your local dealers.

Menu Setting

Press  button at Main Page to configure VisionShare system setting.



* Please use Keyboard/Mouse to navigate setting function.

* Setting function include:


1. Device ID
2. Click Setting
3. Background
4. Power Setting
5. Connection
6. System

Notice:

- * The Specification subject to change without further notification. NorthVision reserved all copy-right.
- * All wireless model, actual transmission distance and connection may vary depends on different set up environment and equipment.
- * Please do not place Receiver in a closed cabinet, which may cause disconnect or no signal.
- * For further detail set up information, please visit www.NorthVision.com

VisionShare Series

Wireless Collaboration System

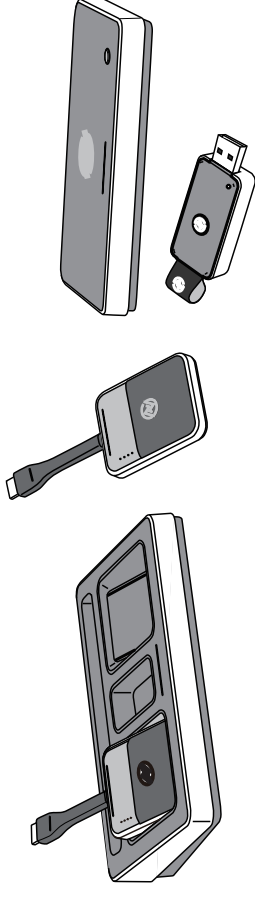
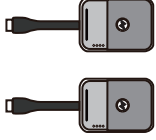
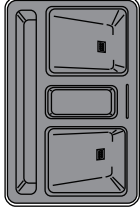








Quick Installation Guide

A20 / A30 / A40 / A45

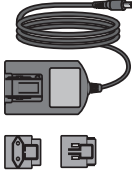

I. Package List

				
Receiver	Transmitter x 2	Power Station	Micro USB	HDMI Cable
				
Universal Adapter Set x 2	miniDP to HDMI Adapter	USB Wireless Touch Dongle	Touch USB Cable (Type A to Type B)	
				Optional (A30 and A45 only)